# **INGY-HBWD DALI**

# Ceiling High Bay (Wide) Passive Infra Red (PIR) Occupancy Detector & Photocell for DALI ballasts

Input: 100-240 Vac 50/60Hz

PLEASE READ THESE INSTRUCTIONS BEFORE INSTALLING THE PRODUCT NOTE: INGY-HBWD DALI is only compatible to work with INGY enabled equipment.

This INGY-HBWD DALI High Bay (Wide Detection) Lighting Control can be mounted directly onto solid ceilings or onto a range of different mounting boxes. Configurable for any room occupancy style, via the INGY APP on Google Play or Apple APP Store.

# **INSTALLATION**

To be installed by a competent person with reference to BS 7671 or equivalent local standards. If in doubt consult a qualified electrician.

- Plan where the INGY-HBWD DALI is to be located (see diagram 1). Switch off supply and check for hidden cables and pipes.
- The INGY-HBWD DALI should be connected as shown in diagrams 2 and 3:
  - Live in.
  - N Neutral in.
  - + DALI control line (polarity independent)
  - DALI control line (polarity independent)
- Knockout or drill the appropriate holes on the mounting plate for attaching the plate to the ceiling or back box (if applicable). Feed cables through the appropriate (side or rear) entry hole. Screw the back mounting plate to the ceiling or back box via the mounting holes. Wire the cables into the sensor head block terminal. Push the sensor head onto the mounting plate and align the side clips with the slots on the sensor heads.

# **OPERATION**

To check the operation of the INGY-HBWD DALI:

- Turn on the supply then after 20 seconds if the sensor has recognised movement of a person within its zone of detection the integral red LED on INGY-HBWD DALI will stay illuminated for 4 seconds before the red LED turns off.
- Thereafter, every time movement is detected by INGY-HBWD DALI the integral red LED will stay illuminated for 4 seconds.

The control also features adjustable time out (time lag) control and daylight threshold control which are configured by the INGY APP.

# **PRECAUTIONS**

- Do not place the INGY-HBWD DALI near heat sources, fans or in ventilated ceiling voids.
- INGY-HBWD DALI can be wired in parallel (sharing the same Live and Neutral).
- Do not place close to, or positioned such that, any light source points directly into the INGY-HRWD DALL
- Ensure wires and cables are securely held within the connection terminals.
- The INGY-HBWD DALI should be protected by a 5 or 6 Ampere mcb or fuse.
- Disconnect the INGY-HBWD DALI from the circuit before performing insulation testing of the wiring circuit.

#### **TECHNICAL DETAILS**

INPUT	
Voltage:	100 - 240Vac
Frequency:	50/60Hz
Max. mains current:	20mA
Standby current:	18mA
OUTPUT	
Output:	DALI 12VDC
Output Current:	16mA (maximum 8 ballasts)
RADIO TRANSCEIVER	
Operating frequencies:	2.4 2,483 GHz
Max. output power:	+4 dBm
LUX PARAMETERS	
Range:	5 - 2000 lux

# **OPERATING CONDITIONS**

Note: The temperature difference between the detection target and the background must be at

Ambient temperature:	-20 +40 °C (lout 20mA)
Storage temperature:	-25 +75 °C
Max. relative humidity:	0 80%, non cond.

# CONNECTORS

Terminal block Wire size:	0.5mm <sup>2</sup> - 2.5mm <sup>2</sup> solid or stranded
Wire strip length:	6-7mm
Tightening torque:	0,4 Nm/4 Kgf.cm

# MECHANICAL DATA

Dimensions:	63mm x 91mm x 91mm
Weight:	105g (unpacked)
Degree of protection:	IP20
Protection class:	Built-in Class 2
Material (casing)	Flame-retardant polycarbonate
Finish / Colour	Matt /White (RAL 9003)
Protection class:	Built-in Class 2

# CONFORMITY AND STANDARDS

# EMC emission:

EN 301 489-1 V2.2.0, EN 301 489-17 V3.1.1, EN 55032: 2015, EN61000-3-2: 2014, EN61000-3-3: 2013

**EMC immunity:** EN 301 489-1 V2.2.0, EN 301 489-17 V3.1.1


# **Environment:**


Complies with WEEE and RoHS directives


# **5 YEAR WARRANTY**


INGY-HBWD DALI comes with a 5 year warranty from the date of manufacture and is CE marked.



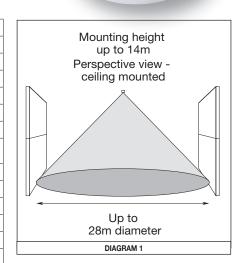

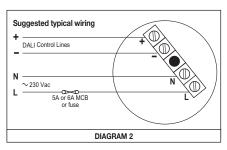

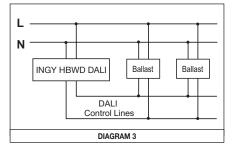

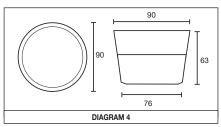



Company Registered Number 2570169 VAT Registration Number 543 5491 38

