



DALI COCKPIT AND DALI-MONITOR

Software to commission DALI systems and monitor DALI bus communication.

The following functions are supported:

Addressing DALI systems, configuration of DALI components, configuration of standard DALI operating units, definition of groups and scenes, logging bus communication, sending DALI commands and saving/loading the entire system configuration.

The software requires a DALI USB interface module DL-USB mini or SL-Flash- USB.

DALI Cockpit and DALI-Monitor	Software	Download from the Eltako website
DALI-FIORITO		